

Quick Guide

10515-0372-4100
Rev. F, March 2016



Radio Overview

- Antenna
- Emergency Button
- Indicator LED
Red = Transmit
Green = Receive
Orange = Encrypted TX
- Top Display
Contains channel, channel name, system/zone name, scan status, emergency status, battery meter
- Speaker
- Primary Microphone*
- Front Display
- Soft-Key Displays
- Soft Keys
- Select/Shortcut Button
- Navigator
Use to highlight and select a menu item
- Keypad
- Home Key
- Channel Knob
- Power/Volume Knob
- Programmable Switch
- Secondary Microphone*
- Bank Selector
- User-Programmable Button (Top Side)
- PTT Button
- User-Programmable Button (Middle Side)
- User-Programmable Button (Bottom Side)
- Battery

*Dual Microphone System used for noise cancellation

Select Channel and Bank

- Select channel.
- Select bank.

For detailed operating information, refer to Operator's Manual 10515-0372-4200, available at www.pspc.harris.com.

NOTICE!
The material contained herein is subject to U.S. export approval. No export or re-export is permitted without written approval from the U.S. Government. Rated: EAR99; in accordance with U.S. Dept. of Commerce regulations 15CFR774, Export Administration Regulations.
Copyright © 2009 – 2012, 2016 Harris Corporation.

Main Display Overview

STATUS AREA:
See the "Icons" table for a description of the icons displayed in the status area.

* Harris logo displays if GPS has not acquired after power up.

2 SOFTKEY LABELS

ACTIVITY AREA:
See the "Status Message" table for a complete list of messages displayed by the radio.

Encryption Banner or Missed Call Banner. Refer to the Operator's Manual for more information.

Main Menu

Use the navigator to highlight and select a menu item.

Press 1 - 9 on the keypad for direct access to menu items. Refer to operations manual (10515-0372-4200) for complete menu descriptions, including SEC (3), MSG (8), and UTIL (9).

Icons

	Trunked Signal Strength		Bluetooth On
	TX Power		Bluetooth Connected
	Receive Signal Strength		Secure Traffic
	Channel Idle		Global Encryption
	Transmitting Encrypted		GPS Tracking
	Failsoft		Monitor On
	Nuisance Channel		OTAR Disabled
	Receiving Data		OTAR Registered
	Transmitting Data		OTAR Registering
	Virtual Site		OTAR Rekeying
	Battery Level		Talkaround Enabled
	Low Battery		Transmit Power Level
	Very Low Battery		RX Only
	Battery Exhausted		Noise Cancellation Enabled
	Battery Charging**		Speaker Muted
	Battery Fully Charged**		VDOC
	RX Mail		Vote Scanning
	TX Disabled		Scanning Enabled
	Tones Disabled		Alert(s) Present
	PTT Disabled		Emergency

** Smart Battery Only.

Icons (Continued)

	Unselected Emergency		Unit Selected
	Selected Emergency		Unit Unselected

Select Zone

Select **ZONE** from main menu and scroll up and down to select zone. **C** indicates Command Tactical Zones and **Z** indicates Mixed System Zones. Mixed System Zones are only available if configured in RPM.

Select **ZONE** from main menu and scroll up and down to select zone. **C** indicates Command Tactical Zones and **Z** indicates Mixed System Zones. Mixed System Zones are only available if configured in RPM.

Activate Mission Plan

From the **PROGRAM** menu, highlight and select a mission plan.


Select **ACTIVATE PLAN**, **VIEW PLAN INFO**, or **CLONE PLAN** on the popup menu. See the Operator Manual for more information on the Clone Plan feature.

From the **PROGRAM** menu, highlight and select a mission plan.

Select **ACTIVATE PLAN**, **VIEW PLAN INFO**, or **CLONE PLAN** on the popup menu. See the Operator Manual for more information on the Clone Plan feature.

Enable Noise Cancellation

To enable Noise Cancellation:

1. Select **SETTINGS** → **AUDIO SETTINGS**.
2. Highlight and enable **NOISE CANCELLATION** using . See "Adjust Settings" for sample menu screens.

How to Use the Noise Cancellation Feature

- Verify **NOISE CANCELLATION** is enabled (see above).
- Talk within 2 inches of primary microphone (see Figure 1).
- Speak clearly, loudly, and with authority.
- If possible, face the noise source when talking into the radio (see Figure 1).
- Ensure the primary and secondary microphones are not covered. See "Primary versus Secondary Microphone" for more information.

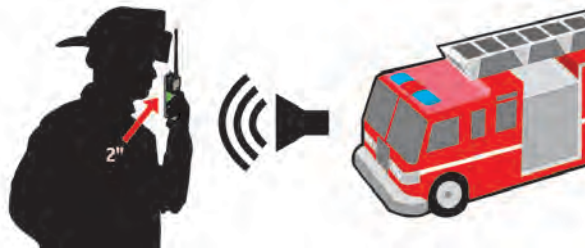


Figure 1: Using the Noise Cancellation Feature

Harris and Unity are registered trademarks of Harris Corporation.

FLORIDA NEW YORK VIRGINIA BRAZIL UNITED KINGDOM UAE SINGAPORE

Primary versus Secondary Microphone

Without a Speaker Microphone Attached:

The primary microphone is located on the front of the radio and the secondary is on the back of the radio. See "Radio Overview" for the location of these microphones.


With a Speaker Microphone Attached:

When a speaker microphone is attached, the radio electronically switches over to use the radio's front microphone as secondary. The microphone on the attached speaker microphone becomes primary (see Figure 2 below).



Figure 2: With Speaker Microphone Attached

Adjust Settings

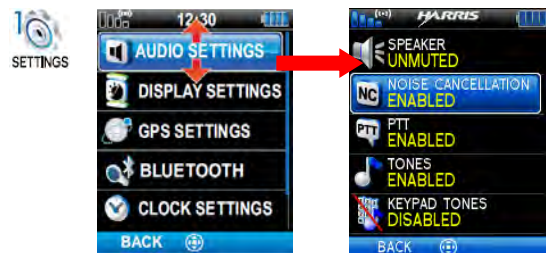


Select a setting to adjust. Inaccessible menu items are grayed out.

Status Messages

Refer to the operator manual for the full list of Status Messages.

MESSAGE	DESCRIPTION
PTT DENIED	P25 Trunked - The radio or talkgroup is not authorized to operate on the selected system and/or talkgroup.
CALL QUEUED	P25 Trunked - The system has placed the call in a request queue.
SYSTEM BUSY	P25 Trunked - The system is busy, no channels are currently available, the queue is full, or an individual call is being attempted to a radio that is currently transmitting.
SCANNING	Indicates the radio is scanning.
TX EMERGENCY	P25 modes only - An emergency call is being transmitted.
RX EMERGENCY	P25 modes only - An emergency call is being received.
WIDE AREA SCAN	P25 Trunked - Indicates the radio has entered the Wide Area Scan mode to search for a new system.
INVALID TALKGROUP	P25 Trunked - The current talkgroup is not valid for the current system.
INVALID UNIT	P25 Trunked - The current unit is not valid for the current system.
REGISTERING	P25 Trunked - The radio is performing a registration on a P25 trunking site.
CTRL CHANNEL SCAN	P25 Trunked - The control channel is lost and the radio has entered Control Channel Scan to search for the control channel (usually out of range indication).
BAND SCANNING	P25 Trunked only - Only displayed if the P25T system is configured for "EnhancedCC" mode of operation. When the radio cannot find a Control Channel in either the trunked frequency set or the list of discovered adjacencies, the radio is able to perform a full spectrum frequency scan to find a new Control Channel.

Individual Calls

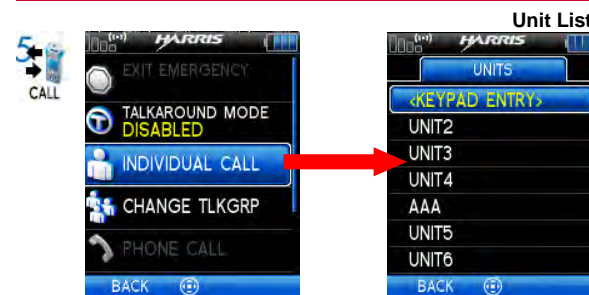

From the CALL menu, select **INDIVIDUAL CALL**.

For Individual Calls, select a predefined unit from the list, or enter select <KEYPAD ENTRY> to enter the Unit ID directly.

The "PTT" field on the main display shows the call information.


Individual calls must be on a digital channel.

Emergency Operation

Press and hold the emergency button on the radio or speaker/mic to declare an emergency. Length of time to hold is programmable.

- For digital channels, the radio transmits the talkgroup or radio ID to the dispatch console or receiving radio.
- The radio goes through transmit and receive cycles, if configured. Speak into the microphone while the radio is transmitting or press PTT to talk.
- To exit emergency, power cycle the radio or select **EXIT EMERGENCY** from the CALL menu. If enabled via programming, clear an emergency by pressing the Monitor/Clear button (top side button by default) and then the emergency button.
- When receiving an emergency on a digital channel, the Unit ID appears in the activity area.

Scan Configuration

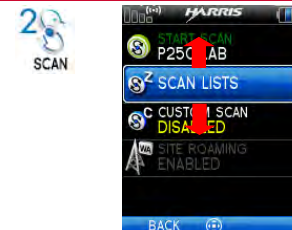


Select **SCAN LISTS**. From the **SCAN LISTS** screen, you can select **VIEW/EDIT** or **START SCAN**.

Select **VIEW/EDIT**→**OPTIONS** to access **SET PRI1**, **SET PRI2**, **REMOVE PRI**, **DELETE GROUP/CHAN**, or **ADD CHAN**. Select **NUISANCE** while scanning to remove a channel from the list.

Available options are based on radio programming.

Scan Channels

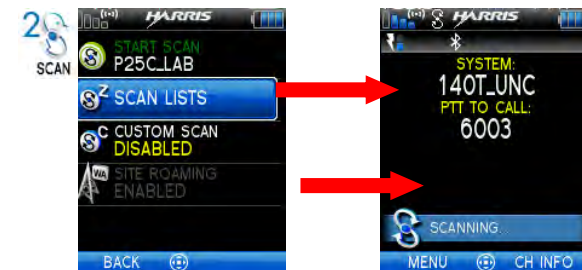

From the Scan menu, select **SCAN LISTS** to configure the scan list. Select **START SCAN** to start scan.

Activity message appears noting that the radio is scanning.

R4A and later radios support Custom Scan lists. Refer to the Operator Manual for more information.